



Original New Remote  
FR 60

## Handset Programming Instructions

### Vicway 380G & Vicway 390G



Original old Remote  
FR 46

*Use FR 60 if the Original old remote has white Buttons.*

### **PREPARATION:**

**Locate on Control Panel:** The control panel is located below the LCD screen on your motor unit. You will need to gently remove the cover by squeezing the 2 sides of the cover.

**Locate S button:** S button will be on the panel which is under the cover.

Have remote control handset in hand ready for programming.

### **STEPS:**

1. Press and hold S button until “0” appears on the LCD screen (ie. Around 2 to 3 seconds)
2. Press desired button on Remote Control Handset for approximately 2 seconds then release for 2 seconds then press again for another 2 seconds and release.

Your Handset is now ready for use.