

This is a four-channel keypad, "1-4" buttons correspond to Channel 1-4, and the default factory PIN is "1234" for all four channels.

### *Reset Your PIN*

- Choose one channel and press the relevant number button, you will hear one short beep.
- Enter the original PIN, press "\*" button, buzzer responds in a long sound for 1s.
- Enter your new PIN, press "ENTER" button, you will hear one short beep.
- Enter your new PIN again, press "ENTER" button again, buzzer responds in a long sound for 1s, which means reset is successful.

### *Match Code with Motor*

- Press the "CODE" button on the motor until the motor's LED light flashes slowly, then release.
- Choose one channel and press the relevant number button, enter PIN you already set, press "ENTER" button, buzzer responds in a long sound for 1s, motor's LED light goes out.
- Press "ENTER" button again within 7s, buzzer responds in a long sound for 1s, motor's LED light goes out after flashing, which means matching with motor is successful.

### *Opening/Closing Function*

- Choose one channel and press the relevant number button, enter PIN you already set, press "ENTER" button, buzzer responds in a long sound for 1s, then motor operates.