



Vicway Models:
VT380M, VT1200M, VR1100M, VR880M, VR1800M
, VR900E, VR1000E, ***VT1000E.***

ProDoor Models:
900R, 1000R, ***1200T, 1500T***

[1300 783 591](tel:1300783591)

20 Earl Street
Airport West VIC 3042
(03)9338 6698

2/10 London Drive
Bayswater VIC 3153
(03) 9762 2895

enquiries@vicway.com.au
www.vicway.com.au

Locate Code Button : Code Button inside the Motor Front Panel For Model: (Pro 1200T, Pro 1500T, VT1000E) so you need to remove the Front Light Cover.

Have the remote in hand ready for programming.

To program the remote:

1. Press and hold the **Code button** until a red dot appears on the LCD screen (around 2-3 seconds) and then let it go.
2. Press and hold the desired button on the **remote control** for 2 seconds, then release for 2 seconds and then press and hold for another 2 seconds then release.

Your handset is now ready for use.

To delete all stored remotes hold the code button until a red dot appears and keep holding until it disappears again.