



Vicway:
VT380M, VT1200M, VR1100M, VR880M, VR1800
M, VR900E, VR1000E, ***VT1000E***

ProDoor:
900R, 1000R, ***1200T, 1500T***

20 Earl Street
Airport West VIC 3042
2/5 London Drive
Bayswater VIC 3153
(03) 9338 6698
enquiries@vicway.com.au
www.vicway.com.au

Locate Code Button : (Code Button inside the Front Panel)

For: Pro 1200T, Pro 1500T, VT1000E you need to remove the Front Panel cover)

Have the remote in hand ready for programming.

Steps:

1. Press and hold the **Code** button until a red dot appears on the LCD screen (around 2-3 seconds).
2. Press and hold the desired button on the remote control for 2 seconds, then release for 2 seconds and then press and hold for another 2 seconds then release.

Your handset is now ready for use.